


HOW TO HANG YOUR PENCIL PLEAT CURTAINS




How to Hang your Pencil Pleat Curtain

Ironing may be required before hanging - for blockout coated curtains ensure iron is used on fabric side only

- 1 Ensure that the cords of the tape are securely fixed at one end of the curtain, by tying together

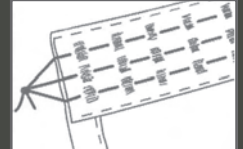

- 2 Gently push the heading cords until all fabric is pleated to its maximum - this forms the pleats. Ease the heading out again to the desired width, distributing pleats evenly. Tie a slip not to hold in place. Do not cut off. Loose cords should be wound around a cord tidy. This way curtains can be untied and flattened for easy cleaning.

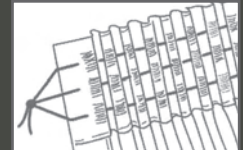

TIP - You will notice that the tape has 3 levels of hook pockets. This allows you to alter the finished length of your curtains. If you wish to hang the curtains below the track use the top pockets for the curtain hooks. If you require the tracks to be covered the bottom row should be used.

- 3 Insert your gathering hooks into the tape. Your curtain is now ready to hang!

